


Proj1 12V Servo Bank												Proj2 6V Servo Bank											
12V-D01	12V-D02	12V-D03	12V-D04	12V-D05	12V-D06	12V-D07	12V-D08	12V-D09	12V-D10	12V-D11	12V-D12	6V-D01	6V-D02	6V-D03	6V-D04	6V-D05	6V-D06	6V-D07	6V-D08	6V-D09	6V-D10	6V-D11	6V-D12

XR1 Torso Servo to Main Board Map


Proj1 12V Servo Bank												Proj2 6V Servo Bank											
12V-D01	12V-D02	12V-D03	12V-D04	12V-D05	12V-D06	12V-D07	12V-D08	12V-D09	12V-D10	12V-D11	12V-D12	6V-D01	6V-D02	6V-D03	6V-D04	6V-D05	6V-D06	6V-D07	6V-D08	6V-D09	6V-D10	6V-D11	6V-D12

The Head and Hands are serviced by their own control boards connected to the PC. This means that depending on the optional hands and head you pick for your build.

The neck tilt servos and head rotate servo will be controlled by the head board.

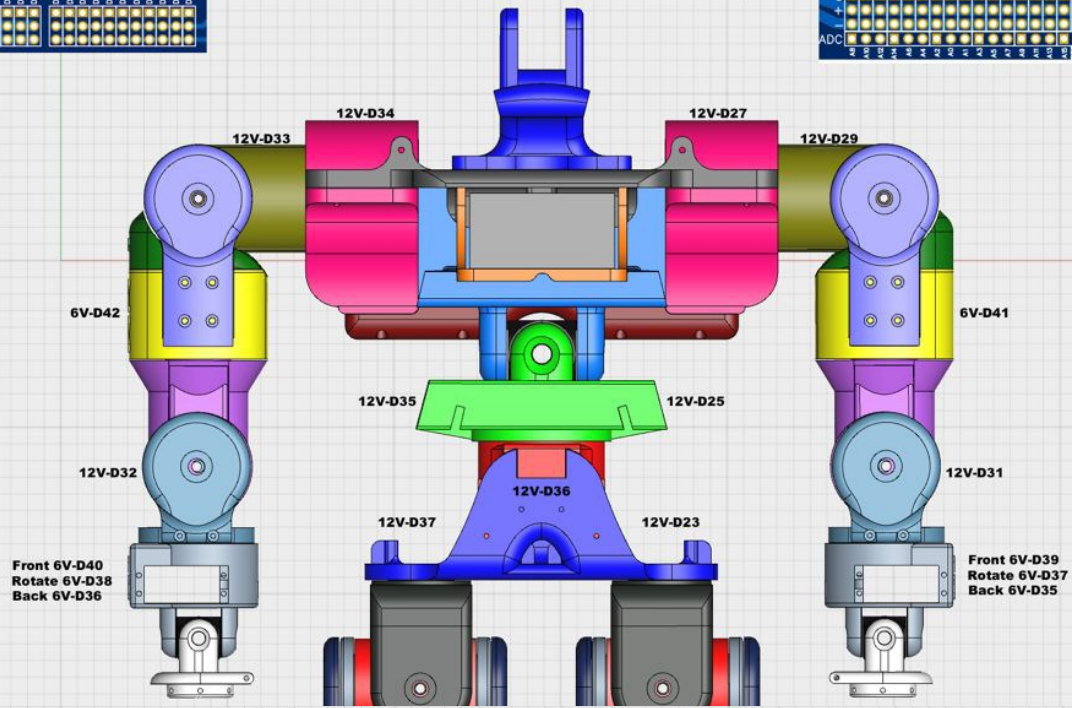

XR1 Legs Servo Map to the Main Board

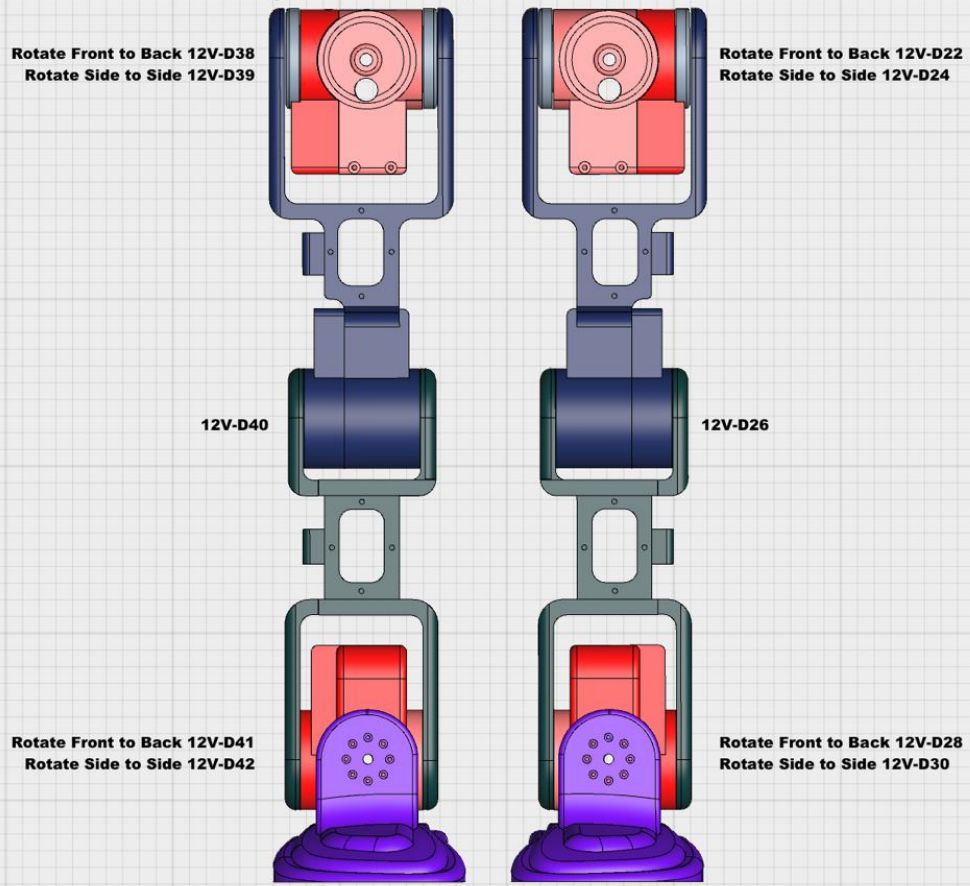

XR1 SERVO MAP

By Shawn Miller